



www.scottoiler.com

Technical Support



technical@scottoiler.com



+44(0)141 955 1100


## SA-0093 M10 Fine Pitch Bobbin Mount Dispenser Adapter.

### Parts List:

M10 x 20 screw



M10 Dispenser Plate

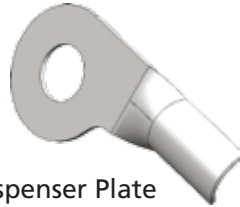


The parts enclosed allow a vSystem or an eSystem to be fitted to bikes with bobbin mounts requiring an M10 Fine Pitch screw, and M10 Dispenser Plate.

For model specific install guides with photographs see [www.scottoiler.com](http://www.scottoiler.com)




1. Place the M10 dispenser plate supplied in this kit on the bobbin mount with the curved face curving inwards.

Secure using the M10 fine pitch screw provided.

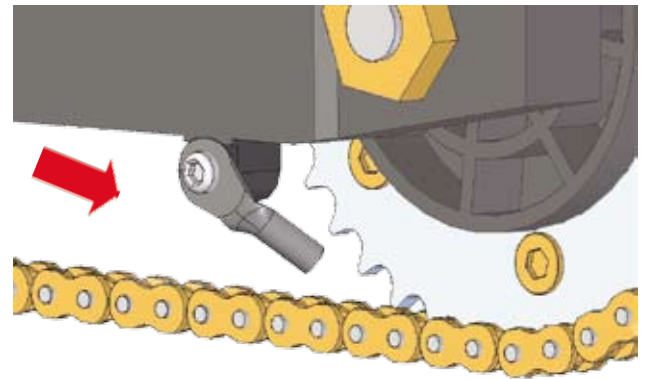

2. Secure the dispenser assembly to the dispenser plate by clamping around the black nylon sleeve using the jubilee clip.

3. Carefully position the nib between the 6 and 8 o'clock position on the outside face of the rear sprocket with the slash cut of the nib facing away from the sprocket. Take care to avoid the sprocket bolts. The metal dispenser plate can be bent towards the sprocket slightly and the nib length altered for optimum fit.

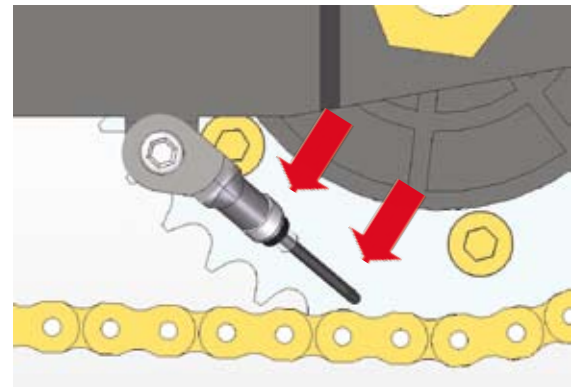

4. Route the delivery tubing from the dispenser back toward the reservoir by routing the delivery tubing inside the swing arm to behind the rear suspension unit and up towards the reservoir on the subframe.

Make sure delivery tubing is neatly routed, allow a little slack for suspension movement, and ensure it cannot come loose or be snagged by the chain or other moving parts.

Follow the instructions from either the eSystem or vSystem kit from here.

