



Technical Support




www.scottoiler.com technical@scottoiler.com +44(0)141 955 1100

## SA-0620 KTM 690 LC4, 950 & 990 LC8 eSystem adapter

### Parts List:

M10 x 16 screw  
Split washer  
10mm Dispenser Plate  
5mm spacer

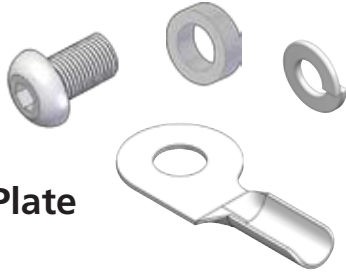

The parts enclosed allow an eSystem to be fitted on the KTM street models making use of the same bespoke dispenser found in the vacuum operated Scottoil KTM kit.


For model specific install guides with photographs see: [www.scottoiler.com](http://www.scottoiler.com)

### Dispenser Assembly


1. Fit the M10 bolt together with the split washer, 10mm dispenser plate and the 5mm aluminium spacer. Secure the M10 (or M8) assembly on the swinging arm.

Note: On 690 Supermoto and 690 Duke models, the 5mm aluminium spacer is not required.

Note: RC8 models do not require this adapter, simply fit the small dispenser plate from the eSystem kit.

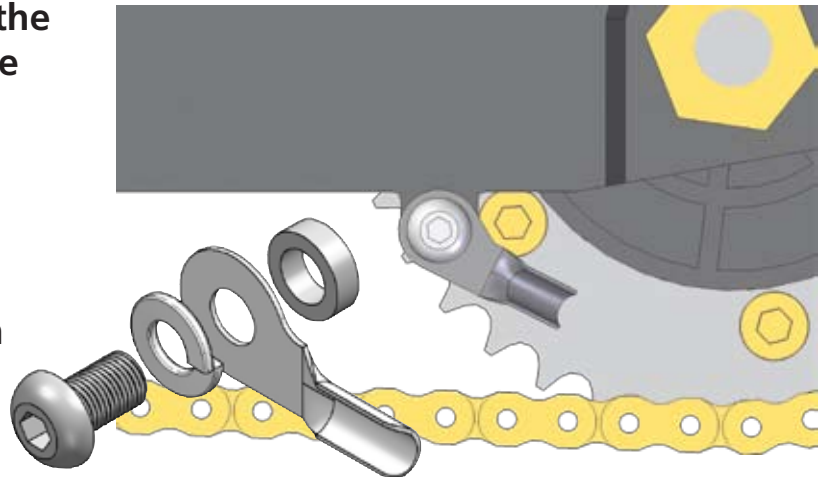

2. Secure the dispenser assembly to the dispenser plate by clamping around the black nylon sleeve using the jubilee clip. Carefully position the nib between 6 and 8 o'clock, on the outside face of the rear sprocket with the slash cut facing away from the sprocket. Take care to avoid the sprocket bolts.

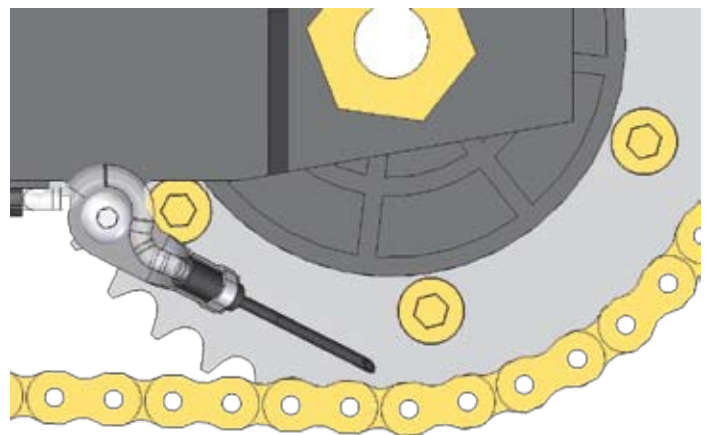

3. Follow the instructions from your eSystem kit and route the delivery tubing from the dispenser to the top of the reservoir (REP), do not connect to the REP at this stage though, the delivery tubing must be primed before inserting the checkvalve. As highlighted in the eSystem instructions.